


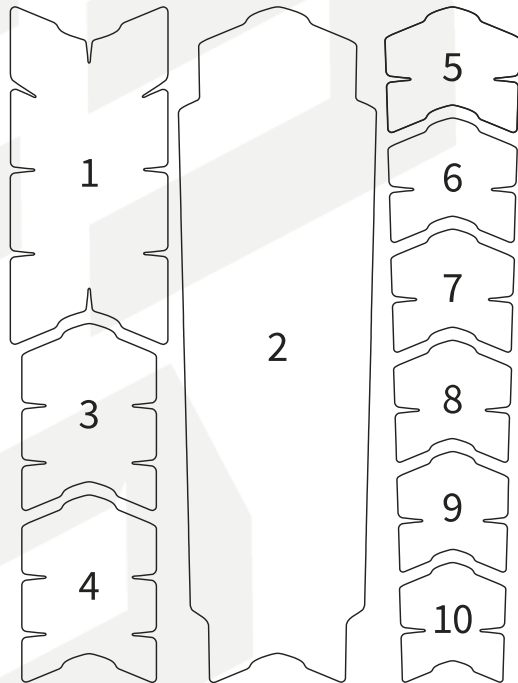


**Assembly instructions for our bike protection UNSCRATCH BP01**


**top tube**




**down tube**

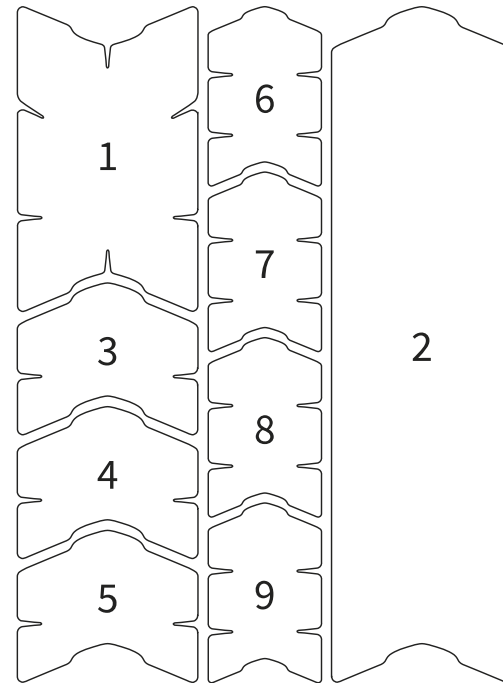

**down tube E-frame**

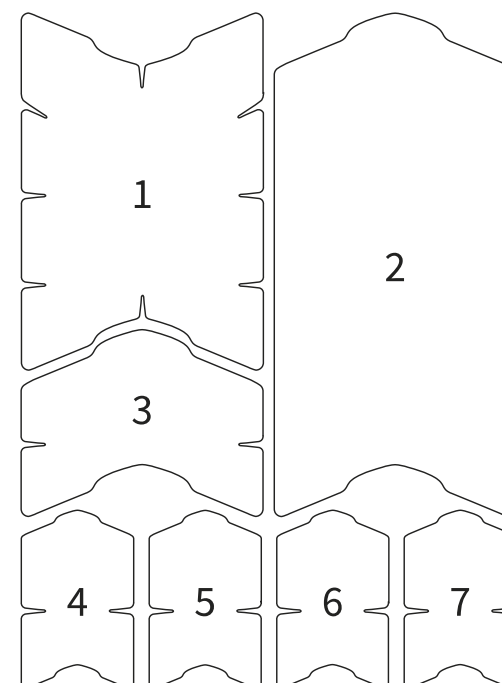

**rear triangle**

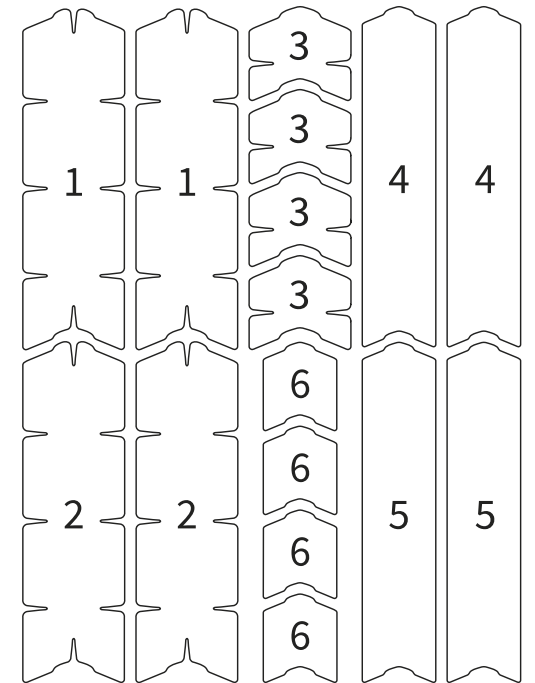



- Remove rough dirt and then clean your bike with a commercially available "cleaning product | surface cleaner".
- Important: your bike must be free of oil and grease.




- Apply at room temperature between 20 °C and 22 °C.
- Shapes can be applied according to our application plan (pages 6-9), but also according to your own ideas.
- The foil should extend at least 1 cm beyond the edges of your frame to achieve the desired adhesive strength.




- After gluing, the individual shapes should be treated with a household hairdryer on level 3.
- For optimum adhesion: Leave your bike in the garage for another 24 hours!


**Bounding plan | top tube**

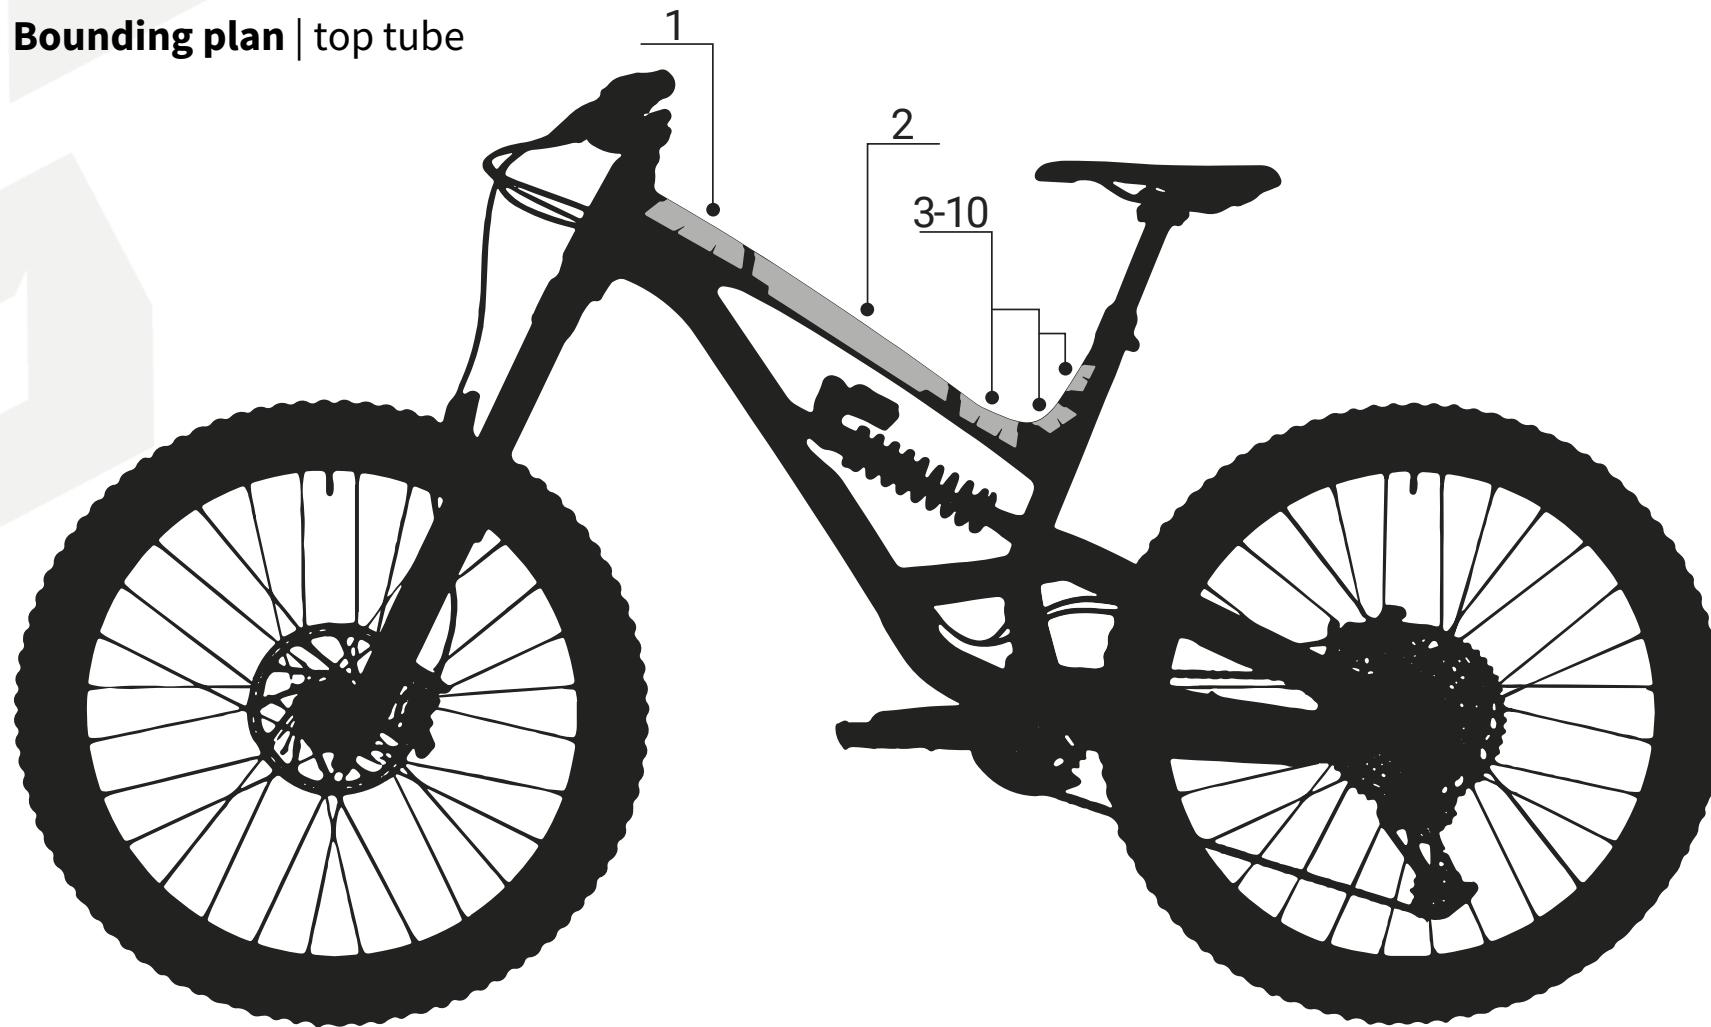

**Bounding plan** | down tube

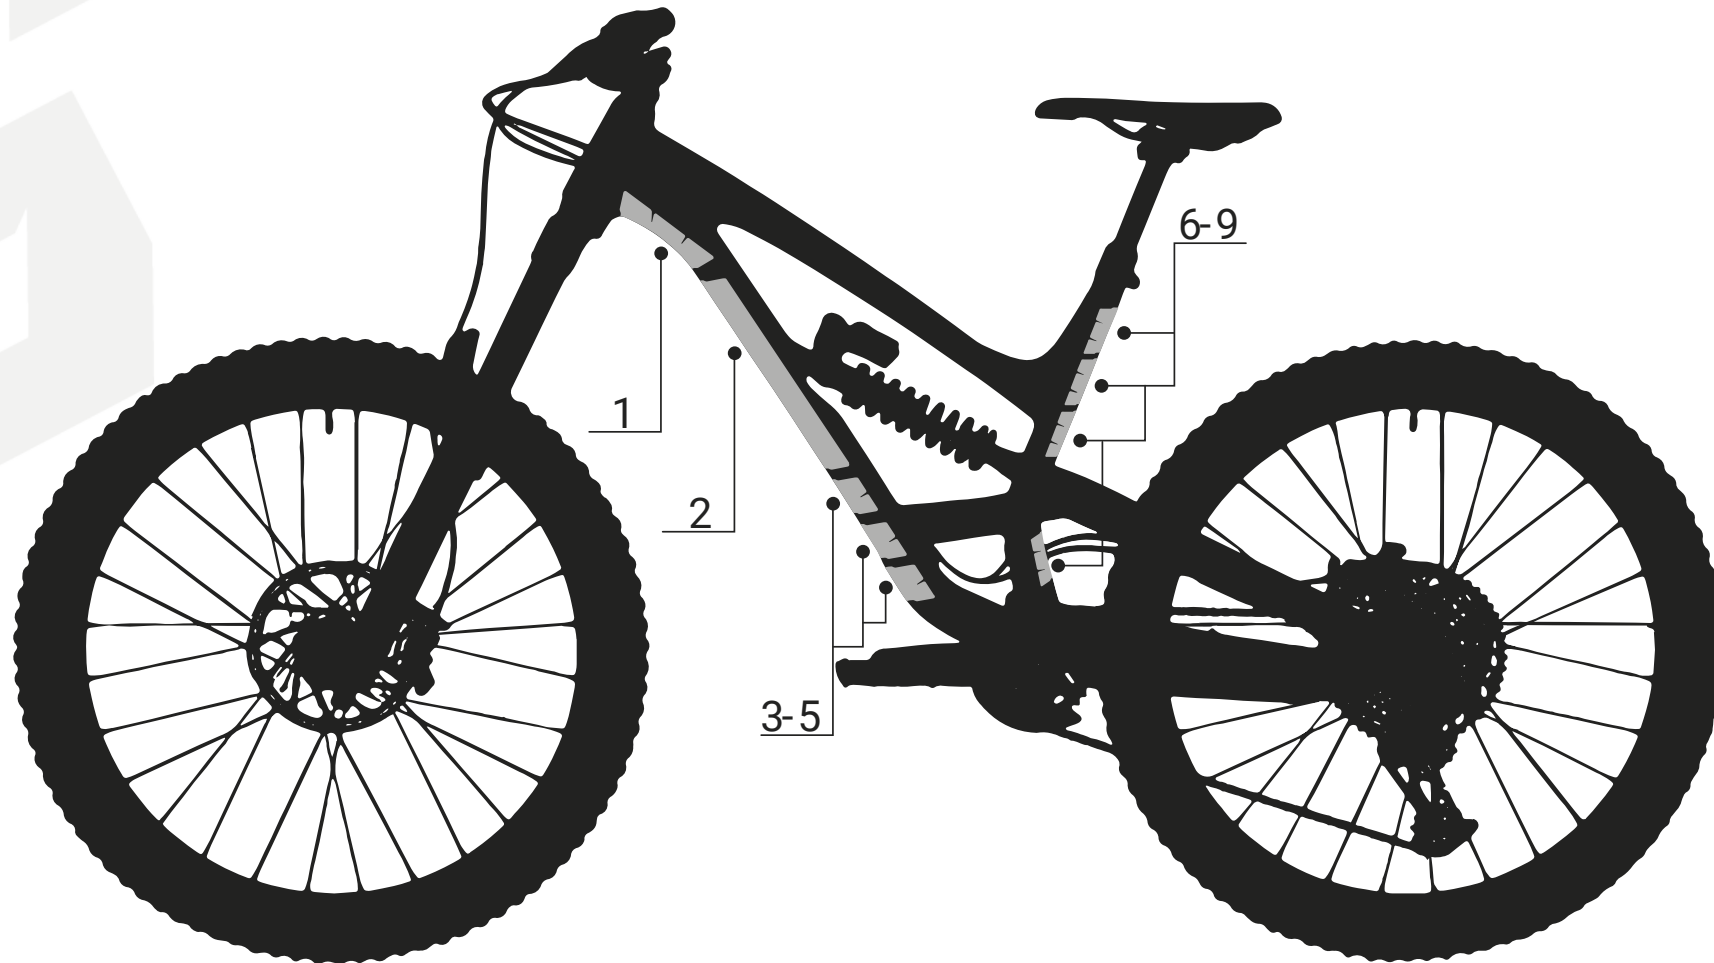


**Bounding plan | down tube | E-frame**

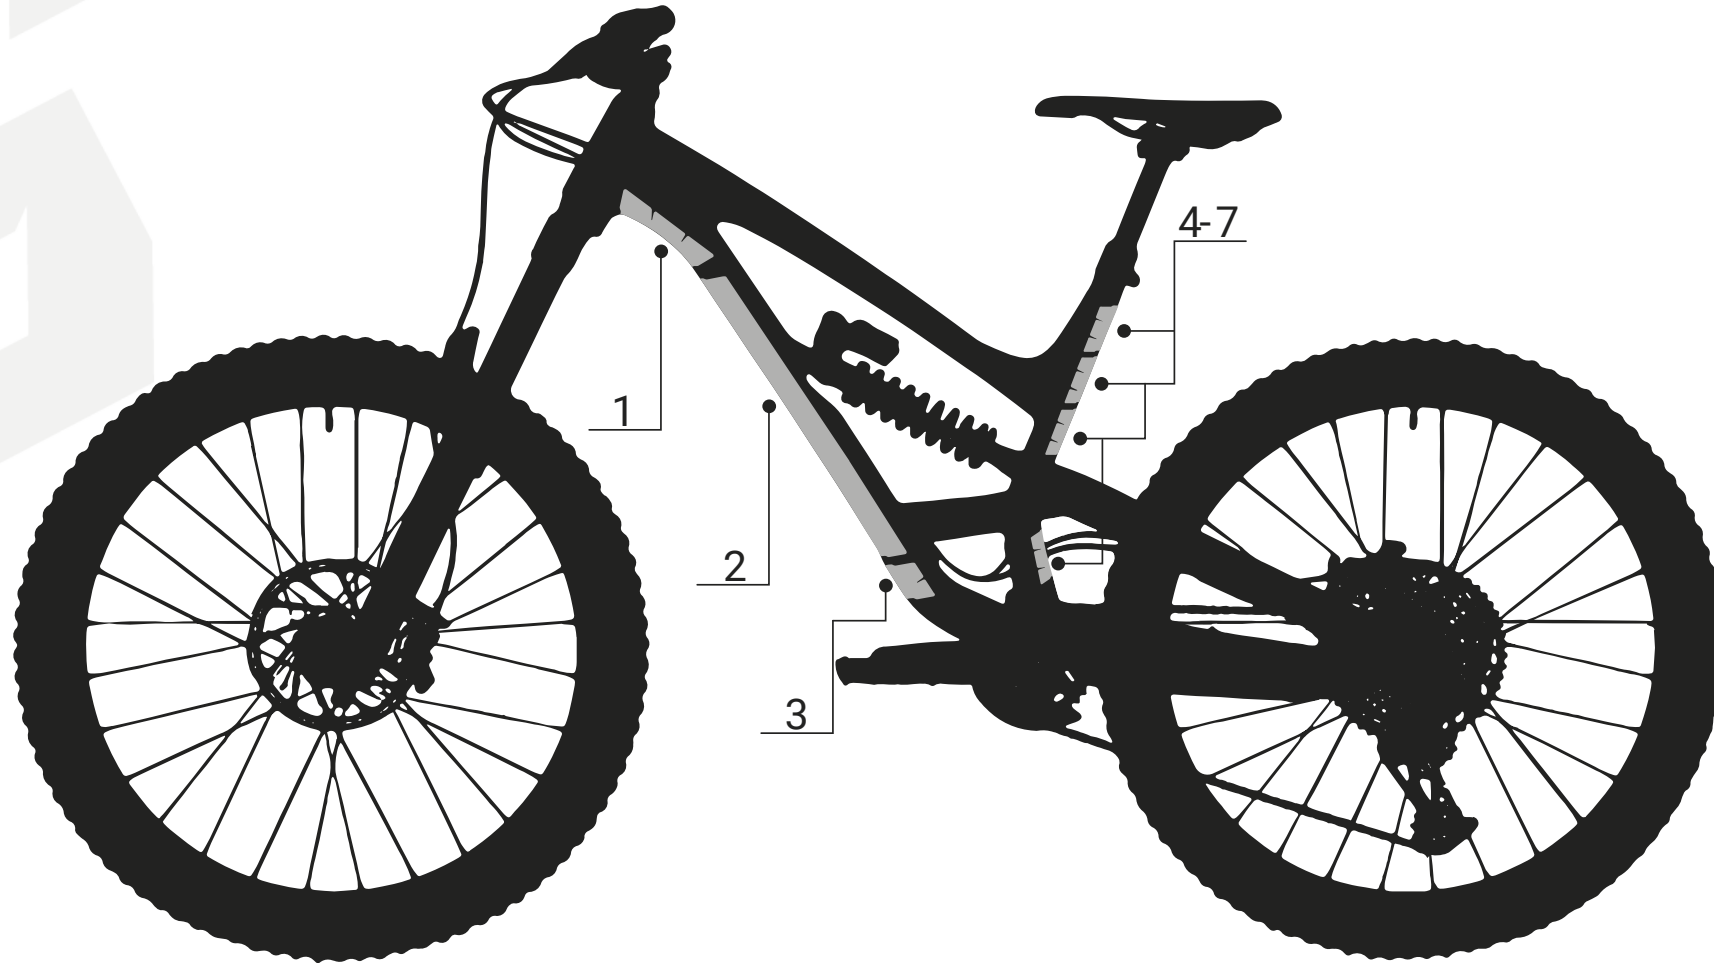



**Bounding plan** | rear triangle

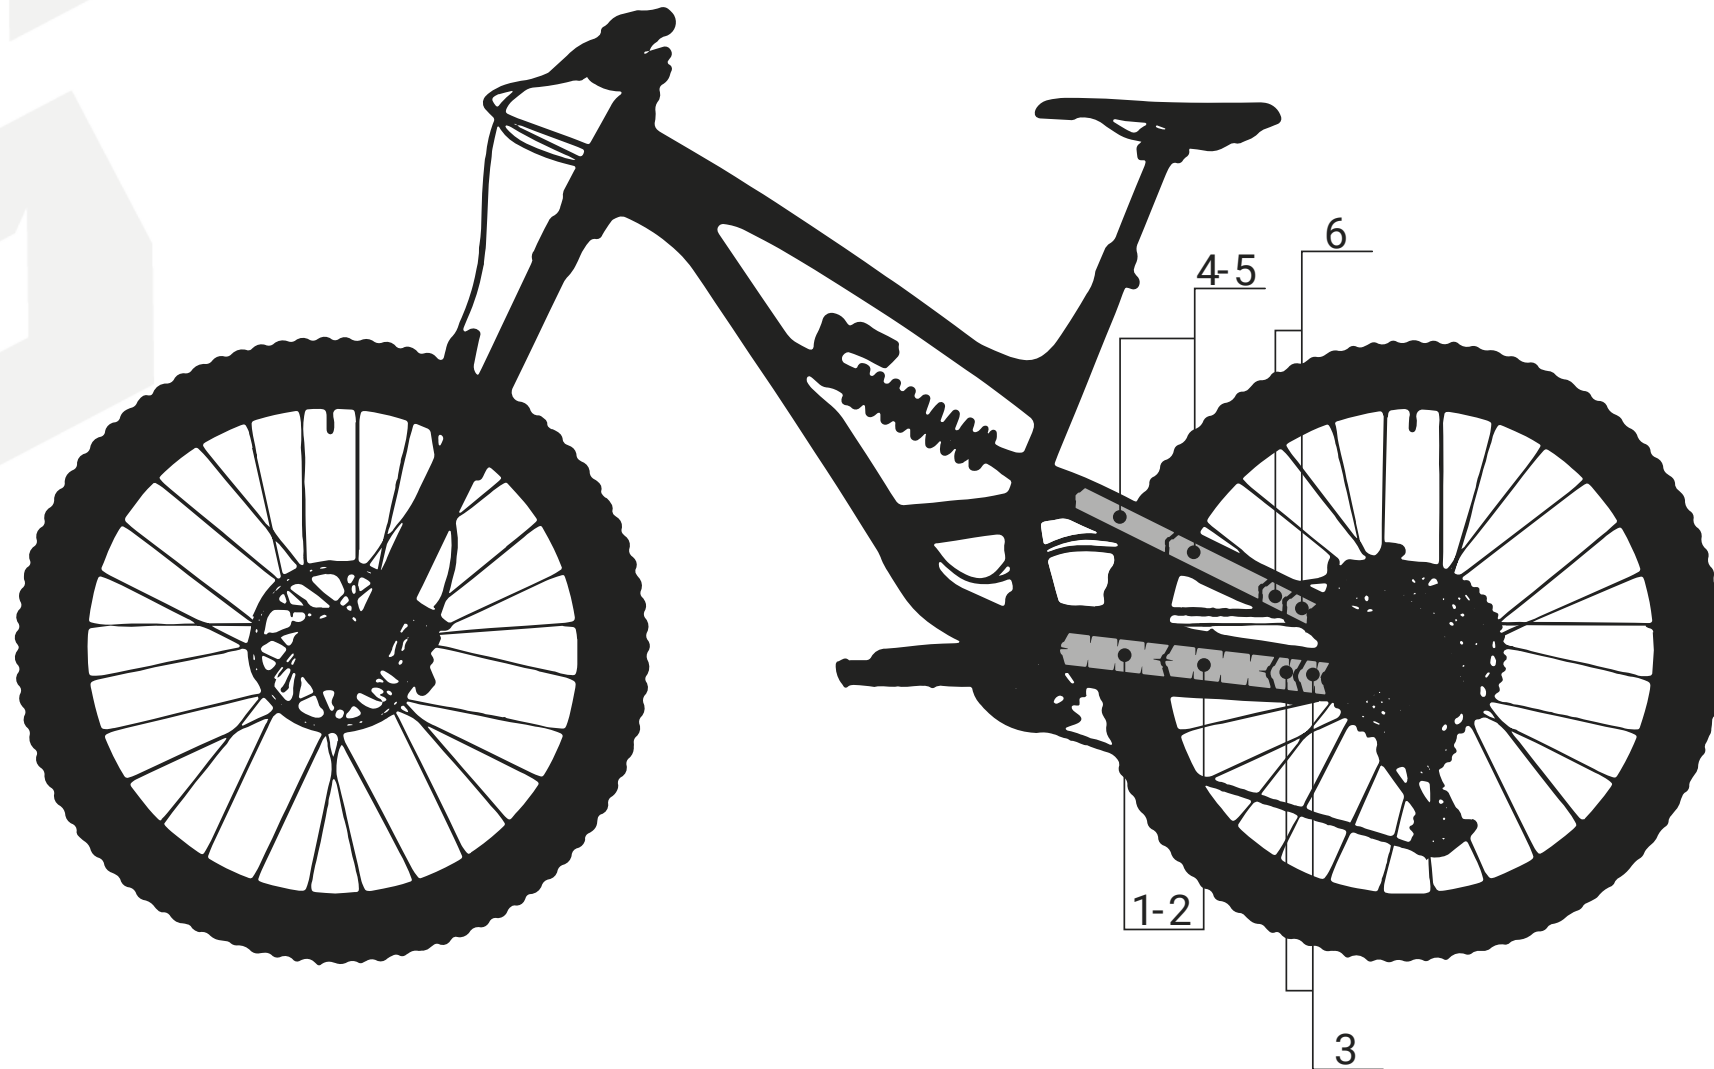



# UNLEAZHED

## UNLEAZH YOUR UNIVERSE

### **Our tips:**

- The surface cleaner must be suitable for use on your bike.
- If there are already scratches on your bike, close them before applying the film.
- It is possible to use a high-pressure cleaner, but please keep it at a distance of 30 cm from your bike when cleaning.