




Assembly instructions for our UNSPLASH M01 on your fork
Downhill | Enduro | Trail | All Mountain | Marathon | XC | 20“-29“



- Open the package at the point shown.
- Remove the UNSPLASH M01 and the enclosed cable ties.
- Press out the punched holes for fastening the cable ties.



- Insert the cable ties into the openings as shown. The longer cable ties are inserted at the side wings.
- Place the UNSPLASH M01 as shown. Push the UNSPLASH M01 from behind through the suspension fork.
- Check the tire clearance between your front wheel and the UNSPLASH M01.

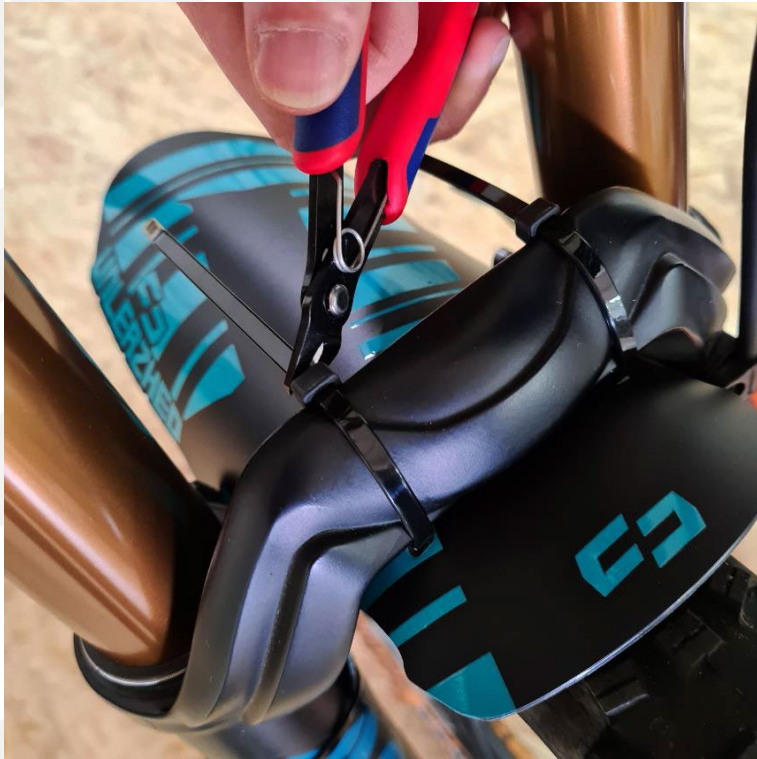

- Tighten the cable ties, first the upper ones and then the side ones. Then remove the protruding ends. Done! **Unleash yourself!**
- The mounting of your UNSPLASH M01 to your rear end is done as described. If your rear end has an additional bridge, another step is necessary. The marked points (4 pieces) must be drilled with a drill, these serve as an additional mounting option.
- Tighten the cable ties. Then remove the protruding end. Done! **Unleash yourself!**



UNLEAZHED

UNLEAZH YOUR UNIVERSE